


MATERIALS:

dimension - draw, measure top and
dry - draw, measure top and
(one draw over)

Doors: options: 1 or 2 doors


1 door	9 " x 47 1/2 "
2 doors	9 " x 23 3/4 "

REAR OVERHEAD CABINET

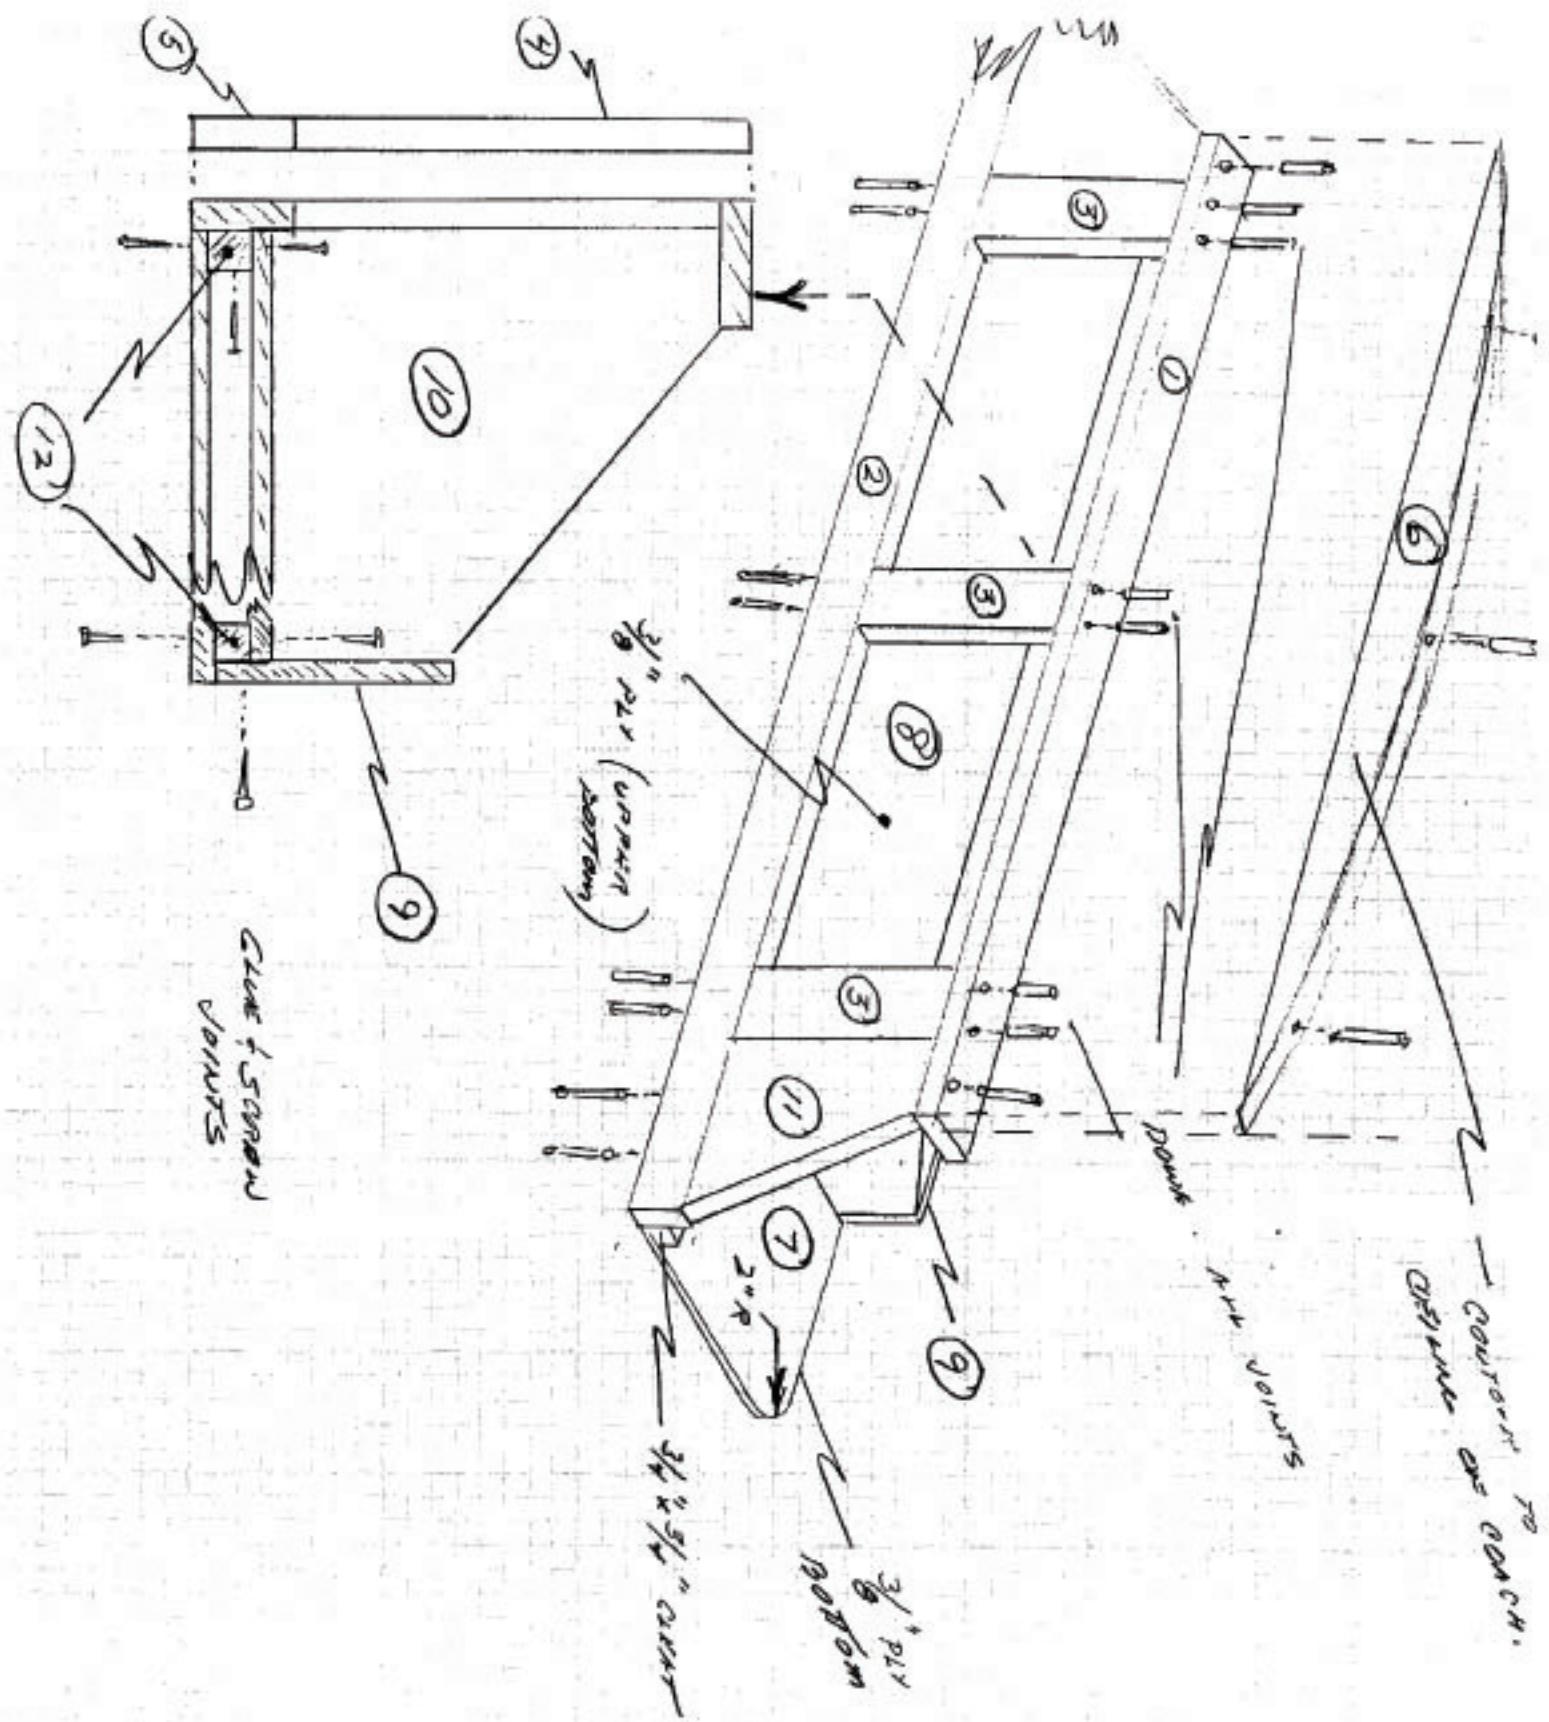

MATERIAL LIST

- ① 1 pc. $\frac{3}{4}$ " x $1\frac{1}{2}$ " x $60"$
- ② 1 pc. $\frac{3}{4}$ " x $1\frac{1}{2}$ " x $75"$
- ③ 3 pcs. $\frac{3}{4}$ " x $2\frac{7}{8}$ " x $7\frac{3}{8}$ "
- ④ 2 pcs. $\frac{3}{4}$ " x $1\frac{1}{2}$ " x $9\frac{5}{8}$ "
- ⑤ 2 pcs. $\frac{3}{4}$ " x $1\frac{1}{2}$ " x $10\frac{9}{16}$ "
- ⑥ 1 pc. $\frac{3}{4}$ " x $1\frac{1}{2}$ " x $60"$
- ⑦ 1 pc. $\frac{3}{8}$ " x $8\frac{1}{2}$ " x $73"$ plywood
- ⑧ 1 pc. $\frac{3}{8}$ " x $8\frac{1}{2}$ " x $58\frac{1}{2}$ " plywood
- ⑨ 1 pc. $\frac{3}{8}$ " x $4"$ x $60"$ plywood
- ⑩ 2 pcs. $\frac{3}{4}$ " x $8\frac{1}{2}$ " x $8\frac{1}{2}"$ plywood
- ⑪ 2 pcs. $\frac{3}{4}$ " x $7\frac{3}{8}$ " x $10\frac{9}{16}"$ plywood
- ⑫ $\frac{3}{4}$ " x $\frac{3}{4}$ " cleats to suit

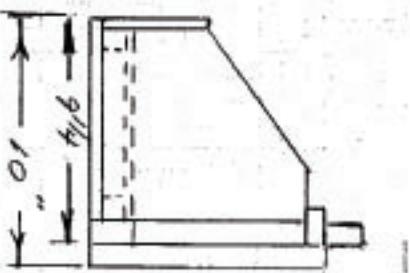

To attach to Standard cmc rear
casings - use 3 - $\frac{1}{4}$ " bolts through end
on rear elements of trapezoidal panel (1)

NOTE: DOOR OR DOORS ARE MADE WITH
STANDARDS ON A CHARGE BASIS